
LED UNDERCABINET LIGHT


MOUNTING FIXTURE

- 1. Remove Captive Mounting Screw Covers.
- Place fixture in desired position and drive Mounting Screws securely.In some installations it may be desired to drill a pilot hole for the screws
- 3. Replace the Captive Mounting Screw Cover.

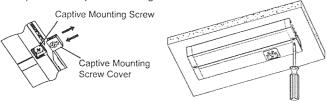

POWER CORD CONNECTION


Remove the Electrical Port Cover and insert the power cord into INPUT electrical port. (Power cord sold separately.)

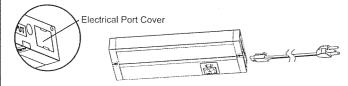

JOINING MULTIPLE FIXTURES


USING JUMPER CORD

- 1. Remove Electrical Port Covers.
- 2. Connect INPUT of Jumper cord to INPUT of electrical port.
- 3. Connect OUTPUT of Jumper cord to OUTPUT of electrical port.

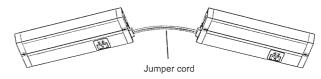


USING END-TO-END CONNECTOR

- 1. Remove Electrical Port Covers.
- 2. Connect INPUT of End-to-End connector to INPUT of electrical port.
- 3. Connect OUTPUT of End-to-End connector to OUTPUT of electricalport.

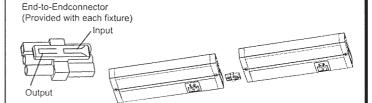

WIRING CONNECTIONS THROUGH A REAR ACCESS DOOR

- 1. Loosen screw that secures rear access door and remove the door from key hole by just a slide. (Fig. 1)
- 2. Assemble 3/8" die-cast connector into Rear Access Door (Fig. 2) and push supply cable through the die-cast connector. (Fig. 3)
- 3. Inside fixture are three wires with Push-in connectors. Carefully pull these out of fixture. Do not pull with excessive force.
- 4. Insert each of the three wires from the supply cable into each of the three Push-in connectors with respective color wires. Black to Black, White to White and Green (Earth wire) to green.
- 5. Neatly push wires and push-in connectors into opening in back of the fixture.
- 6. Close the Rear Access Door and tighten screw.

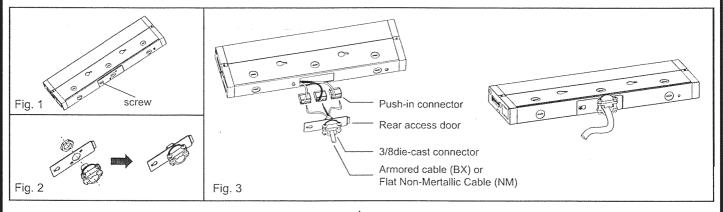

WIRING CONNECTIONS THROUGH A BACK SIDE COVER

- 1. Open a cover in the back using a flat and sharp tool.
- 2. Remove knockout and assemble 3/8" die-cast connector.
- 3. Push supply cable through the die-cast connector and connect wires using Push-in connector.
- 4. Replace the cover and close up.

LIST OF COMPATIBLE DIMMERS

Mfr	Model #	Dimming Rate
COOPER	DLC03P	10 - 100%
Leviton	1A1505 / 1C1605	10 - 100%
Leviton	6631 / 6633	10 - 100%
Lutron	CT-603PG / CT-600PR	10 - 100%
Lutron	DV-600PR / DV603PG	10 - 100%
Lutron	DVW-603PGH / DVCL-153P	10 - 100%
Lutron	MACL-153M / TGCL-153P	10 - 100%
Lutron	S-600PR / S-2-LH	10 - 100%

CCT SELECTION:

- 1. Power Switch on/off switch.
- 2. 3 different CCTs (Correlated Color Temperature) can be selected by using the 3 steps slide switch.

