

Installation Instructions

Bait™ LED Die-Cast Aluminum Pendants

- 1. Before beginning the installations, carefully unpack and identify all parts.
- 2. Turn off power while installing or servicing this fixture.

PREPARATION FOR WIRING:

- 1. Thread cord of pendant into knob, canopy, nipple nut, mounting strap and strain relief. (Fig 1.2.3).
- 2. Measure the desired length of "A" from the top of shade to strain relief by adjusting the cord on strain relief. (Fig 1).
- 3. Leave additional length of 6" from B to C and cut off the unnecessary cord.

NOTE: If you do not want to cut any cord, just leave extra 6" near the end of cord and go directly to wiring.


4. Within the length of 1-1/2" D on the cord near the end,make a mark E,use knife to slightly cut the surface of the cord. (Fig 4).

CAUTION: Cutting too deep in the cord may cut three wires inside.

- 5. Peel off the length of cord outside D and leave 3 wires inside. (Fig 5).
- 6. Peel off the length of 3 wires 3/8" near the end and expose the cooper for wiring. (Fig 6)

WIRING:

- 1. Mount mounting strap securely to junction box with 2 mounting screws through slot in mounting strap. (Fig 7).
- 2. Make wire connections with wire connectors: (Fig 7)
- .---Connect Clear wire with black stripe (or Black wire) from the fixture to Black supply wire with a wire connector.
- .---Connect Clear wire (or White wire) from the fixture to White supply wire with a wire connector.
- .---Fasten Clear wire with light green stripe (or Green Ground wire) from the fixture and Green Ground supply wire and Ground canopy wire to Green Ground screw on mounting strap.
- 3. Tuck the wires carefully inside the junction box.
- 4. Pull the cord down slightly until the strain relief touches the strap. Attach the canopy to the mounting strap by rotation the knob until it is tight.
- 5. Install the recommended bulb.
- 6. Turn on the power at fuse or circuit box.

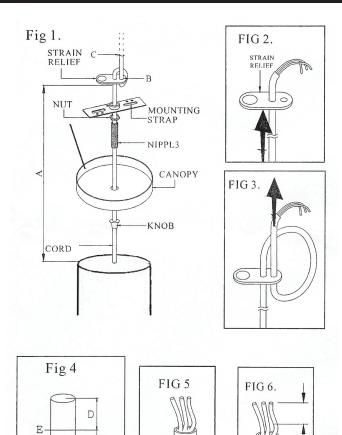

8

