


## WARNING

**RISK OF FIRE. MOST DWELLINGS BUILT BEFORE 1985 HAVE SUPPLY WIRE RATED 60 C  
CONSULT A QUALIFIED ELECTRICIAN BEFORE INSTALLING.**

### INSTALLATION INSTRUCTIONS:


#### 1) INSTALLING FIXTURE TO WALL

Mount housing between wall studs and secure with screens or nails. Edge of tabs should be flush with end of stud.

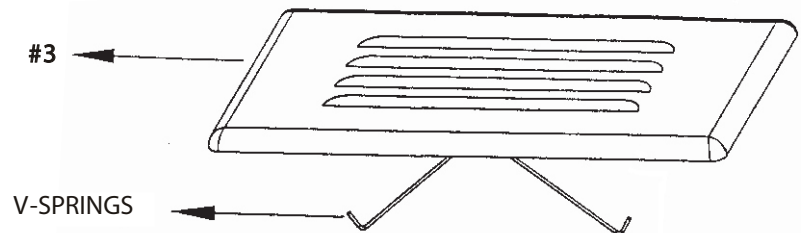

#### 2) ELECTRICAL CONNECTION

Remove junction box cover which socket is attached to install power lead through 1/2 knock out and strip black (hot) and white (neutral) wires and splice to socket wires. Be sure to splice white to white and black to black. Connect ground wire to grounding screw. Carefully insert wires behind junction box cover and re-secure cover with screen provided.

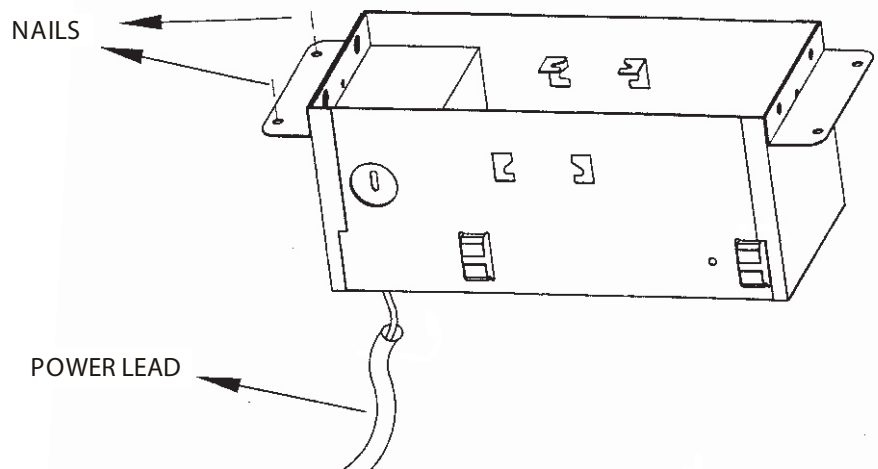

#### 3) TRIM INSTALLATION

First install lamp then holding trim in hand with V-springs facing up take thumb and index fingers on both hands. Pinching V-springs and inserting between stamped tabs and releasing slowly. Trim will pull flush against housing.

